


## Camera tape to DVD Dubbing

Review your Camera manual concerning the play-back functions & pages 34, 75 & 89 of the Sony Manual.

1. Open the lower portion of the Sony Recorder using the tab on each side. The front opens down. Use the audio/video cord supplied with the camera. Plug it into the camera's Audio & Video Out connections and into the LINE 2 IN connections on the Sony Recorder. Be sure to match the audio and video connections of the camera and the recorder. (If the camera has a single Audio Out connection, use the Left (L) Audio In connection on the recorder.)
2. Turn on the camera and insert the tape to be recorded on the DVD. Set the camera function to "Play" or "VCR" mode. Position the tape to the point you want recording to start and press the Pause or Stop button on the camera.
3. Turn TV Monitor ON – Press Power button on the right. (TV Monitor will be on AUX Channel.)
4. Turn DVD Recorder/VCR ON – Press I/O button near the left end of the front panel.
5. Insert your blank DVD. (DVD-R or DVD+R are recommended for maximum compatibility. DVD-RW or DVD+RW may also be used.)
6. On the remote press INPUT SELECT until LINE 2 appears
7. On the remote press "DISPLAY" button (near AUDIO) to view status of tape and DVD.
8. If DVD Record Mode (middle of left box on screen) shows as "SP" and if your tape is at desired starting point, press "DISPLAY" twice to clear. Skip to Step 13.
9. To change to record mode, On the Remote press DVD.
10. Slide cover down at lower end of the Remote to access additional buttons.
11. Press REC MODE until "SP" in message box on the screen. This sets the DVD recorder to Standard Play. SP is recommended for most applications. SP will provide 120 minutes per DVD disk.
12. To adjust tape starting point, press VIDEO to control the VCR, then PLAY and/or Rewind to the desired starting point. Press STOP.
13. On the remote press DVD to control the DVD Recorder.
14. Slide cover down at lower end of the Remote to access additional buttons. Press REC to start the DVD record process and immediately press Play on the camera. Copying and recording (dubbing) has begun.
15. Press STOP on the remote and on the camera when you want to stop dubbing. Recorder will continue for a few seconds after STOP is pressed.
16. You may add another tape to the same DVD if space permits. To do so insert new tape in the camera and repeat step 14.
17. To edit Chapter Titles before Finalizing the DVD. (Optional)
18. Press TITLE LIST. A list of your chapters will appear. (There will be only one chapter if this was a single tape.)
19. Select the desired Title using up/down arrows and press ENTER. A sub-menu will appear.
20. Choose "Title Name" Press ENTER
21. You may edit the Chapter Title using the on-screen keyboard. (See page 46 of manual.
22. Repeat for other chapters.
23. When you are finished with all recording and title editing, the DVD must be "Finalized" before it will play on most DVD players. DVD+RW discs are automatically finalized. (see page 44)
24. To Finalize disc, press DVD, then press SYSTEM MENU>Select "Disc Settings">Press ENTER>Select "Disc Finalize">Press "ENTER">Select "Finalize">Press ENTER>Select "OK">Press ENTER.
25. Disc will now be finalized and will play on most DVD players.

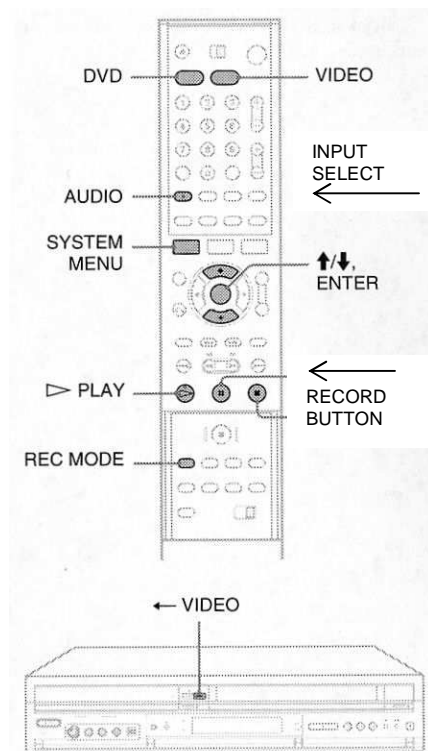

## Blank DVD Disc Test

Several Computer Club members have spent an hour or more transferring a VHS tape to DVD only to discover nothing was recorded on the DVD. It seems this is a problem of quality of the blank disc. Unfortunately, the recorder equipment provides no notice that it can't write to the DVD.

If you are using a new package of DVDs you may want to test the first one in one of these ways:

### Test Option #1 – Title the Disc.

1. Press DVD on the remote to select the DVD functions of the recorder.
2. Insert the DVD and wait about 30 seconds while it loads.
3. Press SYSTEM MENU> Select DISC SETTINGS, Press ENTER> Select DISC NAME, Press ENTER. Use the display keyboard and remote arrow keys to enter a title by selecting letters and pressing enter. Example: Enter "ABC" or "TEST" or something meaningful.
4. Select the "FINISH" button on the display keyboard (bottom right) and press ENTER.
5. Press SYSTEM MENU to exit the title process.
6. Press the DVD EJECT button on the front of the recorder.
7. Wait a few seconds.
8. Press the DVD LOAD button on front of the recorder (same as EJECT button).
9. Press SYSTEM MENU> Select DISC SETTINGS, Press ENTER. The disc title you entered should appear following DISC NAME on the right side. If it does, proceed with the recording steps of the basic procedure. If it does not you may have poor quality DVDs. You can decide now to return them or try Test Option #2.

### Test Option #2 – Build a Test Chapter

Note: Please read all of these procedures before deciding to take these steps.

1. Follow the Steps 1-4 of the basic procedures to copy your tape to the DVD. In Step #5, DISPLAY, make note of the entry on the REM line of the DVD status. This is the remaining time on the disc. A new disc will show something like 02:02 (2 hours, 2 minutes remaining). Make note of the entry.
2. Continue with the basic procedures to copy your tape to the DVD. After Step #12 let the process run for 3-4 minutes.
3. Press the STOP button on the remote. This will stop the recording process and, if the DVD is good, a Chapter will be created on the DVD with the 3-4 minutes of video recorded.
4. Press DISPLAY on the remote and note the entry on the REM line of the DVD status. If it is still the same as in Step #1 above there is no image being recorded on the DVD. The disc's quality is probably not good enough for this process and you may want to return them.
5. If the entry on the REM line has been reduced by the 3-4 minutes, the video is being recorded on the DVD. The 3-4 minutes of tape has been entered in a "Chapter" on the DVD. You have confirmed the DVD is good. You can now continue with this disc in the following steps or start over with a new disc from the same package and using the basic procedures.
6. To continue with the same DVD, Press VIDEO to control the tape side of the recorder. Press the REWIND button to return the tape to the starting point. Press DVD to control the DVD side of the recorder. Go to Step #12 of the basic procedures.
7. When the you reach Steps #15-20 you may want to name the first chapter (the 2-3 minutes) with a title such as "TEST," and enter meaningful titles for the other chapter(s). When the DVD is played in a DVD player or computer, simply by-pass the "TEST" chapter.