

Video tape to DVD Dubbing

See page 89 of Manual.

1. Turn TV Monitor ON – Press Power button on the right. (TV Monitor will be on AUX Channel.)
2. Turn DVD Recorder/VCR ON – Press I/O button near the left end of the front panel.
3. Insert VHS tape.
4. Insert your blank DVD. (DVD-R or DVD+R are recommended for maximum compatibility. DVD-RW or DVD+RW may also be used.)
5. Press “DISPLAY” button on remote (near AUDIO) to view status of tape and DVD.
6. If DVD Record Mode (middle of left box on screen) shows as “SP” and if your tape is at desired starting point, press “DISPLAY” twice to clear. Skip to Step 11.

Note: To control the VCR press VIDEO, when finished press DVD to return control to the DVD recorder.

7. To change to record mode, On the Remote press DVD.
8. Slide cover down at lower end of the Remote to access additional buttons.
9. Press REC MODE until “SP” in message box on the screen. This sets the DVD recorder to Standard Play. SP is recommended for most applications. SP will provide 120 minutes per DVD disk.
10. To adjust tape starting point, press VIDEO to control the VCR, then PLAY and/or Rewind to the desired starting point. Press STOP.
11. Press DVD to control the DVD Recorder.

12. Press ←VIDEO on front of the recorder to start copying and recording (dubbing).

13. Press STOP when you want to stop dubbing. Recorder will continue for a few seconds after STOP is pressed. Dubbing will stop automatically when tape ends.
14. You may add another tape to the same DVD if space permits. To do so insert new tape and repeat steps 12.

15. To edit Chapter Titles before Finalizing the DVD. (Optional)
16. Press TITLE LIST. A list of your chapters will appear. (There will be only one chapter if this was a single tape.)
17. Select the desired Title using up/down arrows and press ENTER. A sub-menu will appear.
18. Choose “Title Name” Press ENTER
19. You may edit the Chapter Title using the on-screen keyboard. (See page 46 of manual.
20. Repeat for other chapters.

21. When you are finished with all recording and title editing, the DVD must be “Finalized” before it will play on most DVD players. DVD+RW discs are automatically finalized. (see page 44)
22. To Finalize disc, press DVD, then press SYSTEM MENU>Select “Disc Settings”>Press ENTER>Select “Disc Finalize”>Press “ENTER”>Select “Finalize”>Press ENTER>Select “OK”>Press ENTER.

23. Disc will now be finalized and will play on most DVD players.

